



# DDF 10" Digital Screen Display With Motion Sensor



## User Manual

 
 

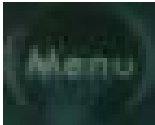 
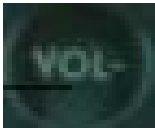 
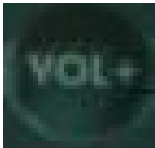 

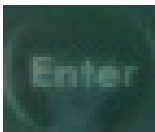 
## Table of Contents

<b>1.</b>	Product Specifications and functions.....	2
<b>2.</b>	Remote Control Keypad Guide.....	3
<b>3.</b>	Turning the Device on.....	4
<b>4.</b>	Startup Settings.....	4
	System Setup.....	4
	Custom Setup .....	5
<b>5.</b>	Optional Functions .....	7
<b>6.</b>	System Upgrade .....	9

## 1. Product specifications and functions

- Supported file formats: JPEG (5000\*5000 pixel max), AVI, FLV, WMV, ASF, RMVB, RM, MP4, MOV, MKV, MPG, MPEG, DAT, VOB (1280\*720 pixel max).
- Play Resource: Play contents from SD Card, USB or internal memory.
- Auto Copy: Auto copy the file from USB to SD, USB to internal memory, SD to USB, or SD to internal memory.
- Auto Play: Auto play after power-on.
- Auto Repeat: Display all files in a loop automatically.
- Timer Function: Auto Power On / Power Off at a preset time.
- Optional Function:
  - Motion Sensor
    - Play contents or standby automatically by motion sensor.
    - Mute or enable sound by motion sensor.
    - Motion sensor time: 15/30/60/120/180 seconds.
- Push Button
  - Press the button to play the files. The button will stay lit when playing the designated files, then go back to the default file folder "0" It will play all files one time, then switch off automatically.
  - You can change the video by button within 1 second.
  - When the standby mode is "low power consumption", it will take 3 seconds from pushing the button to play the file.
  - When standby mode isn't "low power consumption", all buttons will keep flashing. It takes 1 second from pressing the User's Manual button to play the file.

## 2. Remote Control Keypad Guide

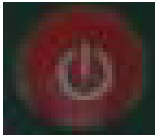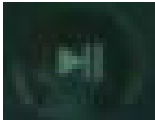	Turn on/turn off
	Play/pause
	Back to the last file/page
	Go to settings menu
	Volume -
	Volume +
	Mute
	Confirm
<b>Left/Right/Down/Up</b>	Control the direction

### 3. Turning the Device on


- Insert SD card or USB driver.
- Connect the power adapter with the device. It will then turn on and auto play.

#### **Caution:**

Use the original adapter for your power supply, otherwise the player will burn out. If using a battery pack for your power supply, please make sure all batteries connect with the correct anode or cathode, otherwise the player will burn out.

### 4. Startup Settings

When the player is on, you can press the “Menu” button to enter the settings as follows:

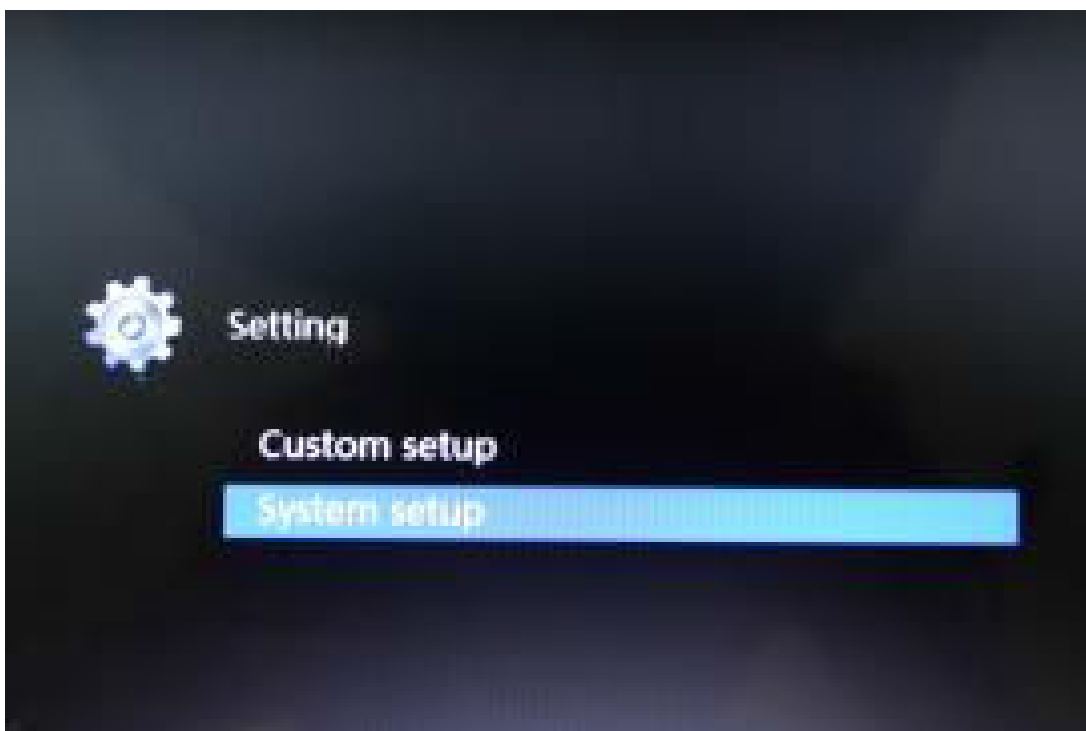

## 4. Startup Settings (Continued)

### • System Setup

Press "Enter" to get inside "System Setup", where you can update the language, date and time as follows:

- **Language:** Use the "Left/Right" button to select the menu language.
- **Set Date:** Please use the up and down buttons to select "Set Date", then press the "Enter" button, after that, you can use the left and down buttons to adjust the year, use "Enter" to confirm, and adjust the month and the date in the same way.
- **Set Time:** Use the up and down buttons to select "Set Time", then press the Enter button. After that, you can use the left and down buttons to adjust the hour and use Enter to confirm. Adjust the minutes in the same way.

### • Custom Setup

Press "Esc" or "Menu" buttons go back to the settings page, and use the up and down buttons to choose "Custom Setup". Press "Enter" to adjust the custom settings as follows:



## 4. Startup Settings (Continued)

**Note:** Keep "Power-saving mode" and "Sensor mode" off in order to use the "Auto power on" and "Auto power off" functions.

- **Auto Power On**

Please use the left and right buttons to turn on the "Auto power on" function.

Set "Auto power on" time: Use the up and down buttons to choose "Set Time", press enter and then use up/down to adjust the hour, then confirm via the enter button. Use the same way to adjust the minutes.

- **Auto Power Off**

Please use the left and right buttons to turn on the "Auto power off" function.

Set "Auto power off" time: Use the up and down buttons to choose "Set Time", press Enter and then use up/down to adjust the hour, then confirm via the Enter button. Use the same way to adjust the minutes.

- **Slide Show Duration**

Use the up/down button to choose "Slide show duration", then use the left and right buttons to choose the duration time.

- **Auto Copy**

Using this function will copy all new files from USB driver to SD card, USB driver to internal memory, or from SD card to internal memory automatically, and delete the old files at the same time.

Use the up and down buttons to choose "Auto Copy", then use the left and right buttons to turn on it.

 
Copy all new files into SD card or USB driver, then plug it into the device - it will start copying automatically.

## 4. Startup Settings (Continued)

**Note:** To avoid others copying new files to the player, please set the "Auto Copy" to off after you finish copying across the new file.

### • Power-saving Mode

This mode can make the device consume less power. Before you turn it on, you must make sure the device has been fitted with a push button or motion sensor. Use the Left/Right button to switch it on, and you will then see:

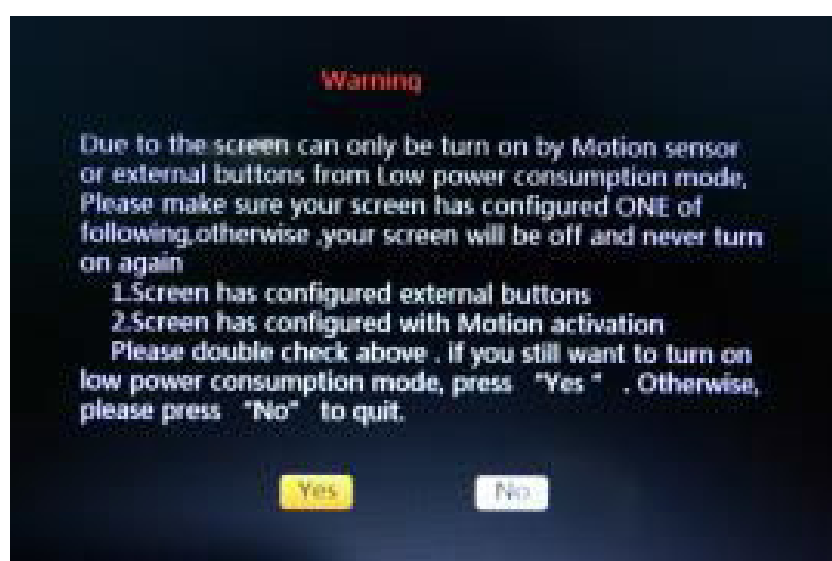

## 5. Optional Functions

### • Push Button

- If built with 1 push button, create two folders in the SD card. One folder named "0", another one named "1". If more buttons, then name it as 2, 3, 4.
- Put pictures and videos into the folder, and the player will auto-play the files in folder "0" either once, or in a loop, according to power-saving mode status.
- Push the button #1, then it will play the files in folder "1" for one time, then go back to folder "0".



## 5. Optional Functions (Continued)

### • Motion Sensor

#### ◦ Sensor mode

- Please use the left and right buttons to select sensor mode.
- Then press the up and down buttons to the previous/next setting.

 
The options for Sensor Mode are:

- Off: Sensor function invalid.
- Audio on: Mute or Enable sound by motion sensor;
- Power on: Play contents or Standby automatically by motion sensor.

### **Note:**

- When power-saving mode is on, it will take around 3 seconds to turn on and play files by motion sensor.
- When power-saving mode is off, it will take around 1 second to turn on and play files by motion sensor.

### • Sensor Interval Time

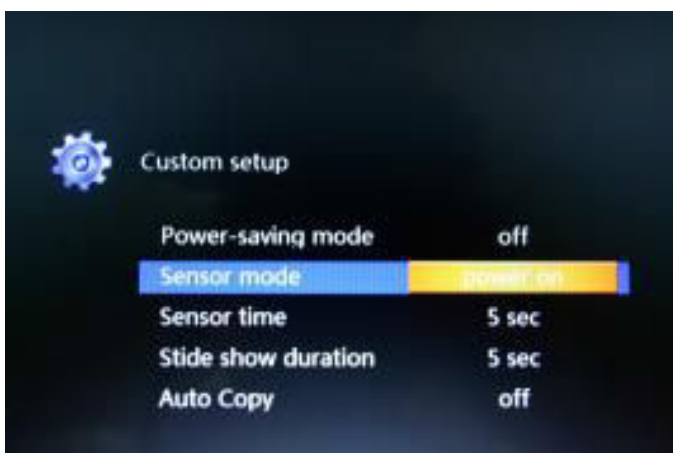

The motion sensor interval time can be set with 15 / 30 / 60 / 180 seconds. Please use the left and right buttons to select it.

## 6. System Upgrade

- Copy the legal upgrade file into the root of Empty SD Card;
- Insert SD card into player, power on and then screen will upgrade automatically.

**Note:** Do not pull out the SD card or power off the unit until the update is 100% finished.