


Assembly Instructions Freestanding Wooden Easel


Components (you will need a Phillips head screwdriver)

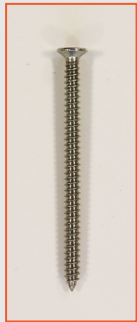

x2 large screws




x4 medium screws

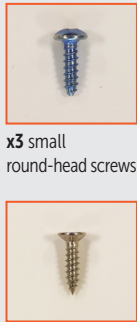


x3 small round-head screws



x2 small flat-head screws

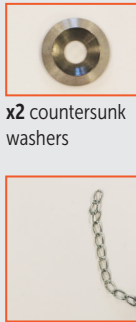

x2 countersunk washers

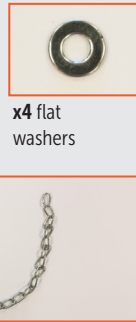

x4 flat washers



 
x1 chain




x1 left leg




x1 middle leg



x1 right leg

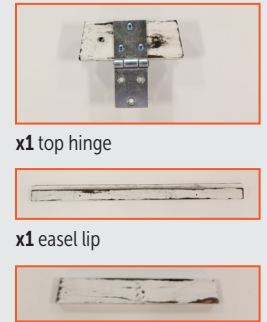


x1 top hinge

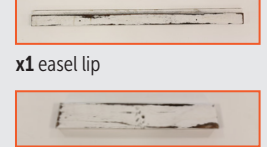


x1 easel lip

x1 middle strut

1. Using the 3 small round-head screws, attach the top hinge to the middle leg (identified by 3 pre-drilled holes at the top).

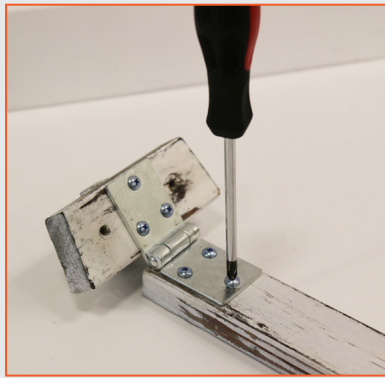


2. Place the left leg underneath the top hinge and, using a flat washer and a medium screw, attach the left leg to the top hinge. Repeat this step for the right leg.

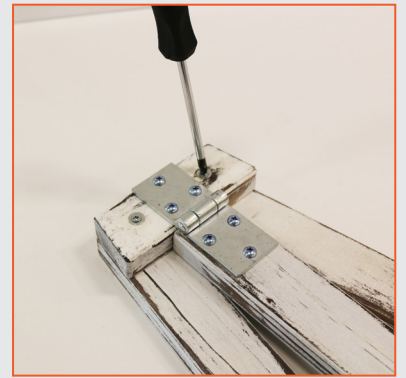


3. Feed the middle strut underneath the middle leg with the pre-drilled hole in the centre facing upward. Attach the middle strut to the left and right legs via the pre-drilled holes on the sides, using countersunk washers and large screws.



4. Lift the structure and feed the easel lip underneath, with the pre-drilled holes facing upward. Align the lip with the holes in the middle of the left and right legs, and attach using the flat washers and medium screws.

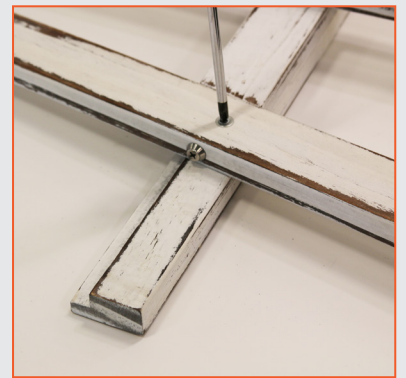

5. Lift the middle leg and screw one side of the chain into the central pre-drilled hole of the middle strut using a small flat-head screw.

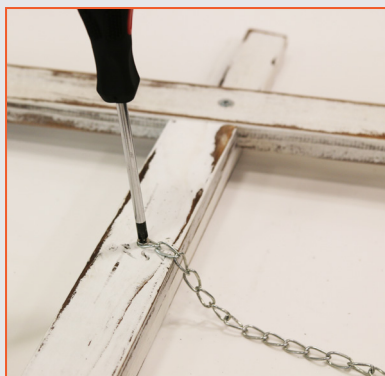

6. Flip the structure, lift the left and right legs and attach the other side of the chain to the middle pre-drilled hole of the middle leg, using a small flat-head screw to complete the construction.

