 


Assembly Instructions Freestanding Wooden Easel

Components (you will need a Phillips head screwdriver)

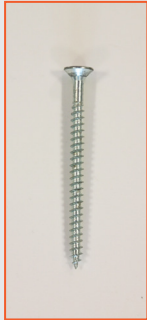

x4 large screws



x2 medium screws



x6 small screws



x6 washers

x1 chain




x1 left leg



x1 middle leg




x1 right leg

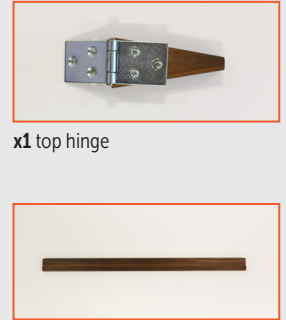

x1 top hinge

x1 easel lip

1. Using the 3 small screws, attach the top hinge to the middle leg (identified by 3 pre-drilled holes at the top).

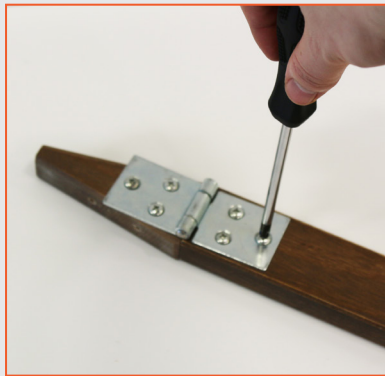

2. Attach the left leg to the side of the top hinge using 2 washers and 2 large screws. Repeat the same process for the right leg.



3. Lift the structure and feed the easel lip underneath with the pre-drilled holes facing upwards. Using washers and 2 medium screws, attach the right and left legs to the easel lip outer holes.



4. Using a small screw, attach one side of the chain to the inner pre-drilled hole of the easel lip.



5. Feed the chain underneath the middle leg and, using a small screw, attach the other side of the chain to the inner pre-drilled hole of the right leg.



6. Flip the structure and centre the chain. Using a small screw, attach to the pre-drilled hole on the middle leg to complete the construction.

