



AH02 - AA4 - AH03 - AGO1S

PRODUCT INSTRUCTIONS

1. Slide the toggle (AH03) into the fixing channel (AH02) via the side opening of the channel.

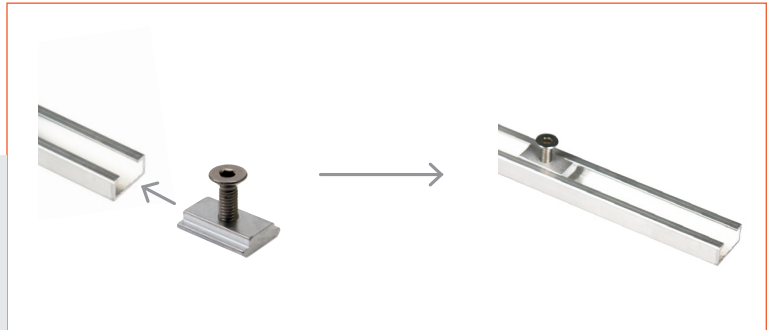

2. Fit your fixing cable (AA4) onto the top of the screw supplied with AH03.

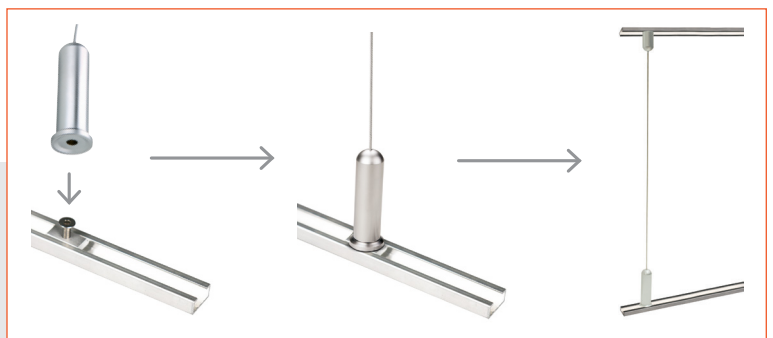

3. Begin to build your cable kit by adding your chosen panel supports to the cable.

