


Assembly Instructions NSK1 Freestanding Automatic Hand Sanitiser Dispenser

Components included:

(You will require a Phillips screwdriver)



1x Base



1x Pole



1x Pole Bracket



1x Snap Frame Bracket



1x Shelf



1x Dispenser



3x Allen Key Screws



2x Top 5mm Screws



2x Bottom 7mm Screws



2x Shelf 8mm Screws




1x Allen Key

How to assemble

1.

Using a single Allen key screw, screw the pole into the base from below

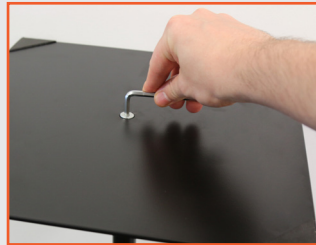

2.

Attach the pole bracket to the top of the pole, set at your desired height and tighten the integrated screw using the Allen key.



3.

Attach the snap frame bracket to the pole bracket through the middle two screw holes, using the remaining two Allen key screws.



4.

Screw the two top 5mm screws about half way into the top two screw holes of the snap frame bracket.



5.

Using the supplied key, open up the dispenser unit to reveal the screw holes.



6.

Mount the dispenser onto the top 5mm screws and tighten.



7.

Move the dispenser sanitiser liquid tank to one side to reveal the lower screw holes. Use the two 7mm screws to attach the dispenser to the bracket.



8.

Attach the two shelf 8mm screws to the bottom of the snap frame bracket to complete the unit.



Please note - The instructions on how to use the automatic hand sanitiser dispenser are supplied separately.